



Gas bottle banding SOP

1. Use 1 3/4 inch banding. Rotate the gas bottles, so that the cylinder valve/outlet is rotated outward for easy connection in the labs (top view, dark blue).
2. First strap 4 bottles from each side of the rack together (green). The banding needs to go through the inside bars of the rack. One strap in around the lower 1/3rd, one on the upper 1/3rd of the bottles.
3. Second, strap all bottles together twice (grey), both just above or below the first banding. Stamp the banding with DO NOT CUT.

Black - Rack
Blue - Gas bottle
Green - Banding
Grey - Banding

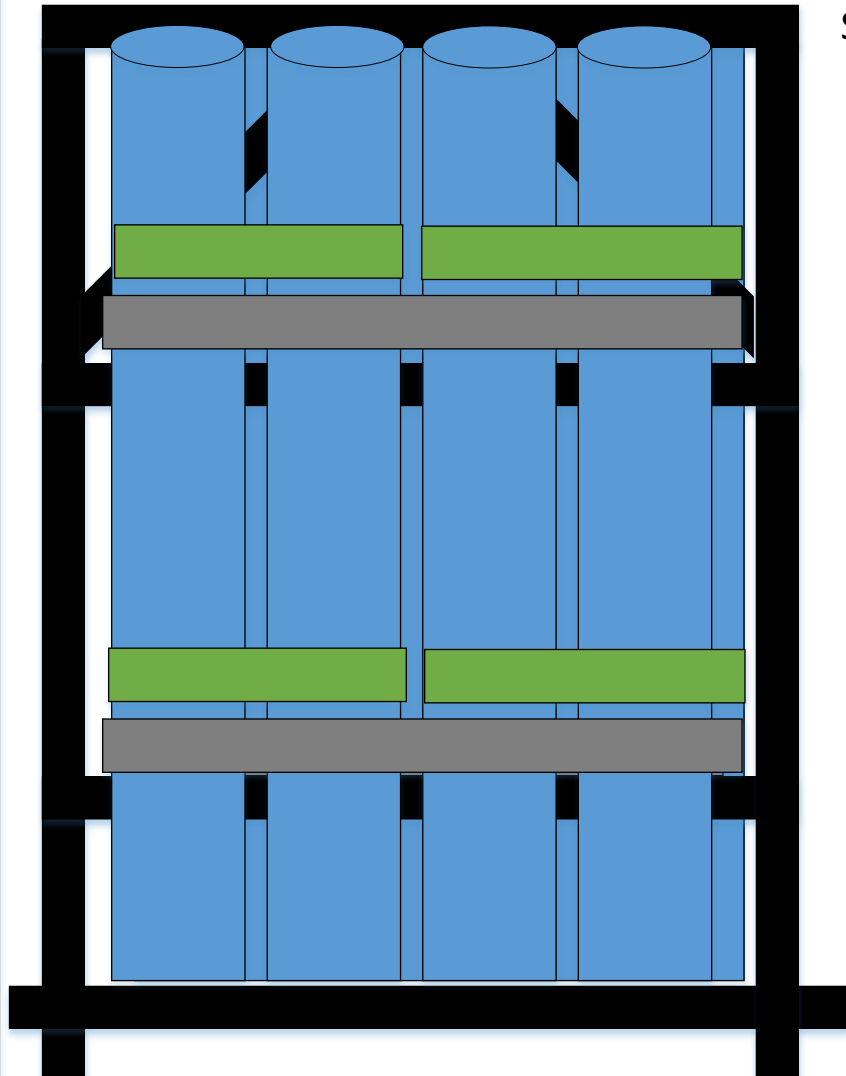

Side view

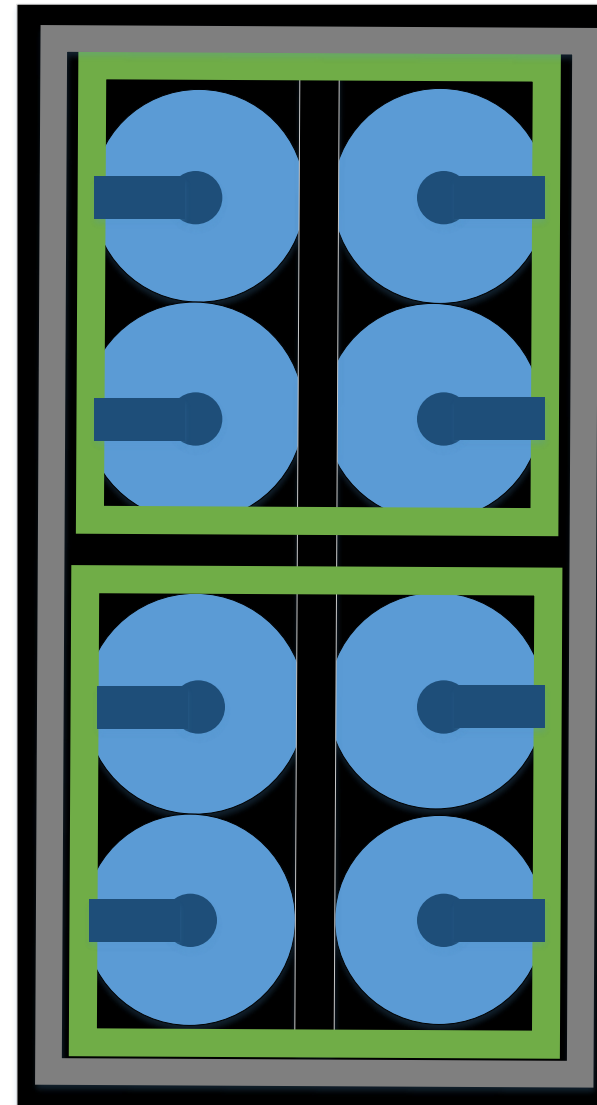

Top view